



## INSTRUCTIONS FOR USE



### Grill

Model : XJ-09380

Voltage: 120V~60Hz

Wattage: 1200W


**Please read these Instructions carefully before using.**

**This product is only for household use only.**

- Before connecting the appliance, please check if the voltage indicated on the bottom of the appliance in accordance with the main voltage in your home.
- Please locate the appliance accessible to the power socket.
- Keep the appliance away from children.
- Before first use, please check carefully if all the parts of the appliance are in good condition. If not, please contact the supplier or manufacturer.
- Never use this appliance if it is not in good condition.
- The socket used should be in accordance with the plug of the appliance.
- Make sure that the power switch is in the off position before plugging.
- The surface is hot when using or before cooled. Never touch the appliance before it's cooled to avoid scald.
- This appliance is intended for domestic use only and not for commercial applications.
- Wipe out the water on the grill plate carefully before use. Do not touch the surface of the

- grill plate in order to avoid scald.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Keep minimum 15 cm away from the wall during operation in order to avoid the risk of fire.
- Do not let the power cord hang free.
- Keep its power cord, or that of any other appliances well away from any hot parts of the plate at all times.
- When removing the plug from the wall socket, never pull on the power cord; always grip the plug itself.
- Always switch off and remove the plug from the wall socket after use, as well as in case of any malfunction during cleaning.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- During operation, the appliance must be placed on a heat-resistant surface.
- No responsibility will be accepted if damage results from improper use, or if there instructions are not complied with.

## Using Instruction

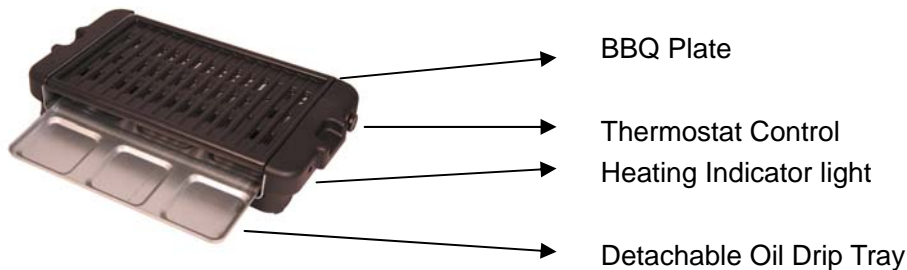

- Put the BBQ grill plate in its position, remove small pans and put oil drip tray in the bottom. Plug in the appliance.
- Turn on the thermostat, the heating indicator comes on. Adjust the temperature to the max position, pre-heating time is 5-8minutes.
- Put some oil on the surface of grill plate and food, then put food on the surface of grill for grilling. You can adjust cooking temperature by the thermostat knob. Redundant oil will drip to the oil drip tray in the bottom. After cooking, you can take out oil drip tray for cleaning.
- Because the surface is very hot, it is recommended to put the appliance on anti-flame and heat-proof cushion. It is also recommended that the minimal distance between wall or environmentally components is not shorter than 15cm.
- It is possible that slight smoke smell comes out when first using.
- In order not to destroy the non-stick coating, when turning or moving food, make sure a wooden shovel is used.

## **Cleaning:**

- Before cleaning or moving this appliance, make sure the appliance is unplugged and cooled.
- Heating plate and reflector plate can be wiped by wet soft cloth.
- Small pans, oil tray and grill plate can be washed in dishwasher.
- Do not flush the appliance directly by water or immerse it in the water. Do not clean the appliance by spraying water.

## **Repairing:**

- If there is any breakdown or damage, the appliance must be repaired by specialized people. Non-specialized people are not permitted to dismantle or repair the appliance
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.