



INSTRUCTIONS FOR USE



Cat/Dog Essential Oil Dispenser

Model: EW-10105

DC5V

Wattage: Max 2W

Capacity: 100ml

HOUSEHOLD USE ONLY

**READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE
USE**

Thank you for purchasing this essential oil dispenser. Each unit has been manufactured to ensure safety and reliability. Mixing the water with aroma oil, it can disperse the aroma oil and refresh the air.


Import safety instructions

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Use this essential oil dispenser only as described in this manual. Other use is not recommended. It may cause fire, electric shock or injury to persons.
2. Always have water in the water tank when operating the unit.
3. Use only clean, cool tap water to fill the tank. If you have hard tap water, it is strongly suggested to use distilled water.
4. Be sure the cap of the water tank is firmly tightened.
5. When adding water to the tank, make sure water is not over than MAX level.
6. This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
7. Do not immerse the upper part into water.
8. Do not cover any openings on the unit or insert objects into any openings.
9. Do not tilt or tip the unit or attempt to empty or fill while in operation.
10. Do not leave the unit unattended in closed rooms. Always leave the room door / window partly open.
11. To protect against electric shock, do not immerse unit, plug or USB cable in water or other liquids.

12. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.
13. Keep the plug and USB cable away from heated surfaces and areas where it could be walked on or tripped over.
14. Close supervision is necessary when any appliance is used by or near children.
15. Turn the unit OFF and unplug from the outlet when not in use, when moving from one location to another and before cleaning.
16. To disconnect, first turn the unit OFF, pull the USB pin away from your PC, grip the plug and pull from the wall outlet.
17. Do not operate it in the presence of explosive and/or flammable fumes.
18. Do not place it or any parts near an open flame, cooking or other heating appliance.
19. Do not operate it with a damaged cord or plug, or if the product malfunctions, or dropped and damaged in any manner.
20. The use of attachments not recommended by the manufacturer may be hazardous.
21. Place the unit on a flat, level surface away from dripping water to the Upper part.
22. Do not operate if the housing is damaged.
23. A loose fit between the AC outlet (receptacle) and plug of adaptor may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
24. Do not use it in any humidity place.

To prolong the life of this unit, using distilled water is highly recommended.

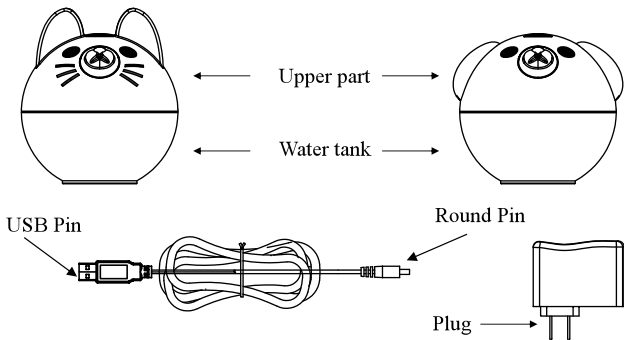

Operation Instruction:

- * Fill water in water tank, but please do not be over than MAX level and less than MIN level.
- * Drip several drops aroma oil into water tank.
- * Insert the round pin into the upper part, then insert the USB cable into your PC or into the plug.
- * When you turn the switch to “OFF”, it does not work.
- * When you turn the switch in “I”, the mist comes out with fragrance. Turn it to “II” to turn on the light.

Cleaning:

- Once it finishes working, please drain all of the water/aroma oil.
Keep it working with water without aroma oil for 5 minutes, then turn it off.
Pull out the plug or USB cable from socket or your PC.
Dry the upper cover with soft cloth.
Place it in a dry place.