



INSTRUCTIONS FOR USE



Grill with Fondue Pot

**Model: XJ-3K076
Voltage: 120V~60Hz
Wattage: 1200W**

THIS PRODUCT IS ONLY FOR HOUSEHOLD USE ONLY.

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USE

Content	Page
Important safeguards.....	3
Special safeguards.....	4
Operation instructions.....	4
Cleaning and maintenance.....	4
Warranty.....	5

IMPORTANT SAFEGUARDS

1. Check that your mains voltage corresponds to that stated on the appliance.
2. Plug the appliance only into an earthed wall socket.
3. Always remove the plug from the wall socket when the appliance is not in use.
4. When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely approved extension leads.
5. Incorrect operation and improper use can damage the appliance and cause injury to the user.
6. The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
7. Never leave the appliance unsupervised when in use.
8. Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
9. Never use this apparatus near water projections.
10. Never use this apparatus with the wet hands.
11. If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
14. Caution ! Do not allow small children to play with the foil .
15. In order to protect children or frail individuals from the hazards of electrical equipment, children should be supervised to ensure that they do not play with the appliance. This device is not a toy. Do not allow small children or disabled person to play with it.
16. From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
17. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person^(*) in order to avoid a hazard.
18. Only use the appliance for domestic purposes and in the way indicated in these instructions.
19. Never immerse the appliance in water or any other liquid for any reason whatsoever. Never place it into the dishwasher.
20. Never use the appliance near hot surfaces.
21. Before cleaning, always unplug the appliance from the power supply and let it cool down.
22. Never use the appliance outside and always place it in a dry environment.
23. Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
24. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
25. Do not wind the cord around the appliance and do not bend it
26. Make sure the appliance has cooled down before cleaning and storing it.
27. Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc.& the power cord and plug do not come in contact with water.

^(*) **Competent qualified person:** after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this service.

SPECIAL SAFEGUARDS

- Stand the appliance on a table or flat surface.
- Do not use or keep this product outside when it is raining.
- Do not store the appliance near hot ovens or heating appliances.
- Certain parts of the appliance can get hot. Do not touch them, as you may burn yourself.
- Never modify the appliance in anyway.

OPERATION INSTRUCTIONS

Raclette Grill

1. Before plugging in your new Raclette grill, check that the electric circuit is not overloaded with other appliances. This unit should always be operated on a separate 110V~120V volt.
2. It is possible that slight smoke smell comes out when first using.
3. When first using, drop some oil on the surface of plate then wipe it with dry cloth.
4. In order not to destroy the plating of non-stick coating, when turning or moving food, make sure a wooden shovel is used.
5. Turn the switch to “ON” position, the pilot light will glow indicating the heating element is energized and heating will begin immediately.
6. Pre-heating time is 8-10 minutes for grill plate.
7. Choose any level you'd like for cooking.
8. Because the surface is very hot, it is recommended to put the appliance on anti-flame and heatproof cushion. It is also recommended that the minimal distance between wall and environmentally components is not shorter than 15 cm.
9. Place mini pan under heating element. Don't put other mini pan which does not match the whole set on the appliance.
10. When cooking is finished, turn the switch back to “OFF” position.
11. The surface is hot when using or before being cooled. Never touch the appliance before it's cooled to avoid scald.

Fondue

1. Make sure that the grill plate sits on the base correctly and the heating element is not exposed.
2. Plug in the appliance and turn it on.
3. Allow the appliance to preheat for approximately 10 minutes while preparing the food for your fondue party.
4. Never heat the pot without any food or water .
5. Never heat the pot with oil.
6. Never move the appliance during operation.
7. Prepare the fondue on the stove before pouring it into the stainless steel fondue pot. Do not use the fondue pot on a regular stove.
8. You can use the fondue forks to pick up food when ready.

CLEANING AND MAINTENANCE

- Before cleaning or moving this appliance, make sure the appliance is unplugged and has been cooled.
- Heating plate and mini pan can be wiped clean with a soft damp cloth.
- Do not spray clean with water or immerse fully in liquid.
- Should the appliance become damaged or require repair please contact your local hardware store.

Model

XJ-3K076

TWO YEAR LIMITED WARRANTY

U.S. PRO APPLIANCES, INC warrants this product to be free from defects in material and workmanship for a period of two (2) years from the date of the original purchase. If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to:

U.S. PRO APPLIANCES, INC

14317 E DON JULIAN RD, CITY OF INDUSTRY, CA 91746

If the appliance is found to be defective in material or workmanship, U.S. PRO APPLIANCES will repair or replace it at free of charge to you. Should U.S. PRO APPLIANCES determine that the product is not defective, is not covered by warranty or is outside of the warranty term, U.S. PRO APPLIANCES shall return the product to you at your expense without being repaired or replaced. The liability of U.S. PRO APPLIANCES is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by U.S. PRO APPLIANCES.

***Important: Carefully pack item to avoid damage in shipping. Be sure to include original sales receipt as proof of purchase with product in either original packaging or packaging affording an equal degree of protection along with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**