



INSTRUCTIONS FOR USE



Multi Cooker

Model : XJ-7K118

Voltage: 120V~60Hz

Wattage: 1000W

HOUSE HOLD USE ONLY

PLEASE SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

- Please read these instructions carefully and retain them for future reference.
- This product is only for domestic (home) use.
- Before connecting the appliance, please check if the voltage indicated on the bottom of the appliance is in accordance with the mains voltage in your home.
- Please locate the appliance near to the power socket.
- Warning: This appliance must be earthed.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is designed for use with the supplied accessories only. Do not use with any other cooking containers or any other accessories.
- Do not open the lid when cooking.
- The main unit and accessories will be hot during operation. Never touch hot metallic parts of the unit or accessories before they have cooled down.
- The appliance must not be immersed in water or any other liquid, especially when it is plugged into a power source.
- The appliance must be on a level, stable and reasonably heat-resistant surface before being plugged in.
- Do not place the appliance near a heat source, and make sure that no hard objects fall on the machine and damage it.
- When finished using the appliance, unplug the power plug from the power source. Be sure not to pull the power cord; grip the power plug itself.
- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Your appliance, on first use, may emit light smoke and some odour for a little while; this is just the excess coating being heated off the inside of the appliance.

This is not cause for concern, and should stop after a few minutes.

[If there is still smoke after 15 mins of continuous use, please contact Customer Service for assistance]

OVERVIEW



OPERATION

1. Check that the power rating on the unit matches that of your local power supply, then plug the unit into the mains power supply.
2. Before first use, wash the accessory containers, plate and lid.
3. Making sure that the base of the accessory is dry, place the appropriate container or plate on the unit, depending on what you are planning to cook. Make sure the container is sitting properly on the heating unit.
4. The accessories are stackable, and the lid can be used on both provided containers.
5. To start cooking, turn the Heating Control Dial clockwise to the desired setting.
6. To turn off the unit, turn the Heating Control Dial all the way anti-clockwise, then unplug the power plug from the power supply.

CLEANING

1. Unplug the appliance and let it cool down before cleaning.
2. Clean the outside of the base unit and the lid with a damp cloth, then dry thoroughly.
3. Never use abrasive pads or harsh chemicals to clean the product.
4. Wash the steaming container, cooking container and frying plate with hot water and dishwashing liquid. Rinse and dry carefully.
5. Do not immerse the base unit in water or any other liquid.