



INSTRUCTIONS FOR USE



2 in 1 Grill
Model: XJ-8K103
Voltage: 120V~60Hz
Wattage: 750W

THIS PRODUCT IS ONLY FOR HOUSEHOLD USE ONLY.

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USE

- Before connecting the appliance, please check if the voltage indicated on the bottom of the appliance in accordance with the main voltage in your home.
- Please locate the appliance accessible to the power socket.

General Safety Instruction

- Keep the appliance away from children.
- The socket used should be in accordance with the plug of the appliance.
- The surface is hot when using or before cooled. Never touch the appliance before it's cooled to avoid scald.
- Wipe out the water on the hot plate carefully in time. Do not touch the surface of the hot plate in order to avoid scald.
- Before first use, please check carefully if all the parts of the appliance are in good condition. If not, please contact the supplier or manufacturer.
- Never use this appliance if it is not in good condition.

Connection

This appliance must be connected to a properly installed 120 V~60 Hz socket with earthing protection.

Appliance Introduction



Using Guide

• Keep-warm function

First, put the detachable enclosure on the appliance, then put the pot, which contains food on the heater, and cover the pot, then set the keep-warm function:

Plug in the appliance and power indicator light will turn red, then you can operate it. Adjust the switch to “Keep warm” and the corresponding heater indicator light “HEAT” will turn red, which means the appliance is on the heating status.

☞ **You can set this keep-warm function for 3 pots, or 1 or 2 pots, just need to operate the different heating elements as you like.**

• Cooking function

Firstly put the detachable housing on the appliance, then put a pot that contains the food on the middle heater and cover the pot, then set the cooking function:

Plug in the appliance and power indicator light will turn red, then adjust the middle switch to “COOK” and the corresponding heater indicator light “HEAT” will turn red, which means the appliance is on the heating status.

☞ **If you want the keep-warm function while you are using the cooking function, what you need to do is to adjust the switches on the right/left side to “Keep warm”, then the pots on the right/left side is on the keep-warm status and the middle pot is on the cooking status at the same time.**

- **Grilling function**

Put the hotplate on the appliance (don't need the detachable inclosure this time) and use it as a normal grill:

Plug in the appliance and power indicator light will turn red, then adjust the middle switch to "Grill" and the middle heater indicator light "HEAT" will turn red, which means the appliance is on the heating status.

Cleaning

1. Unplug the appliance when cleaning.
2. Clean the outside of this item with a damp cloth.
3. Never use abrasive pads or alcohol.
4. Wash the grill plate and pot with hot water or washing-up liquid. Rinse and dry carefully.
5. Never immerse the appliance in water or wash it directly by water.

Model**XJ-8K103****TWO YEAR LIMITED WARRANTY**

U.S. PRO APPLIANCES, INC warrants this product to be free from defects in material and workmanship for a period of two (2) year from the date of the original purchase. If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to:

U.S. PRO APPLIANCES, INC**14317 E DON JULIAN RD, CITY OF INDUSTRY, CA 91746**

If the appliance is found to be defective in material or workmanship, U.S. PRO APPLIANCES will repair or replace it at free of charge to you. Should U.S. PRO APPLIANCES determine that the product is not defective, is not covered by warranty or is outside of the warranty term, U.S. PRO APPLIANCES shall return the product to you at your expense without being repaired or replaced. The liability of U.S. PRO APPLIANCES is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by U.S. PRO APPLIANCES.

***Important: Carefully pack item to avoid damage in shipping. Be sure to include original sales receipt as proof of purchase with product in either original packaging or packaging affording an equal degree of protection along with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**