



## Instruction Manual



### 5 Cups Rice Cooker

Model: XJ-92214/I

Voltage: 120V~60Hz

Wattage: 400W

<b>Content</b>	<b>Page</b>
Safety first .....	3
Know your Rice cooker.....	4
Operating your Rice Cooker.....	4
Rice cooking tables.....	6
How to clean.....	6

**CAREFULLY READ ALL INSTRUCTIONS BEFORE OPERATING  
AND SAVE FOR FUTURE REFERENCE**

- Remove any packaging material and promotional labels before using the Rice Cooker for the first time.
- Do not place the Rice Cooker near the edge of a bench or table during operation.
- Ensure the surface is level, clean and free of water.
- Do not place the Rice Cooker on or near hot gas or electric burner, where it could touch a heated oven. Place appliance at least 8 inches (20cm) away from walls or curtains.
- Do not use on metal surfaces, for example, a sink drain board.
- Use only the removable cooking bowl supplied with the Rice Cooker. Do not use a damaged or dented removable cooking bowl. Replace before using.
- Never plug in or switch on the Rice Cooker without having the removable cooking bowl placed inside the outer housing.
- Do not put liquid into the outer housing. Only the removable cooking bowl is designed to contain liquid.
- Do not touch hot surfaces. Use handles.
- Open the lid carefully to avoid scalding from escaping steam.
- Always ensure the power is switched off at the power outlet and the cord is unplugged from the power outlet before attempting to move the appliance, when not in use and before cleaning or storing. Allow all parts to cool before disassembling for cleaning.
- To prevent electrical hazards, do not immerse the outer housing, cord or plug in water or any other liquid.
- Do not move the Rice Cooker during cooking.
- Do not leave the Rice Cooker unattended when in use.
- Keep the appliance clean. Follow the cleaning instructions provided in this manual.

**IMPORTANT SAFEGUARDS**

1. Read all instructions carefully.
2. Do not touch hot surfaces. Use handles.
3. To prevent electrical hazards, do not immerse cord, plug or rice cooker heating plate in liquid or water.
4. **ADULT SUPERVISION IS NECESSARY WHEN OPERATING ANY APPLIANCE NEAR CHILDREN.**
5. Unplug appliance from the wall outlet when not in use and before cleaning. Allow the appliance to cool completely before adding or removing the pot.
6. **DO NOT** operate the appliance if the cord has been damaged, or if the appliance malfunctions or is damaged in anyway. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. **NEVER** put water or any liquid into the outer pot.
8. **NEVER** plug in the power cord without the inner pot inside the cooker.
9. Always attach the plug to the cooker first, then plug the power cord into the wall outlet.
10. Any use of accessory attachments not recommended by the manufacturer may cause hazards.
11. Do not use outdoors.
12. Do not let cord dangle or hang over the edge of table or counter tops, or allow it to touch hot surfaces.
13. Do not place appliance on or near gas or electric burners, on a stovetop or in an oven.
14. Use extreme caution when moving or handling appliances containing hot oil or other hot liquids.
15. Do not use this appliance for any other purpose but its intended use.
16. **ALWAYS UNPLUG AFTER USE.** Your cooker's power will remain "Keep Warm" unless unplugged.
17. Always make sure the outside of the inner cooking pot is dry prior to use. If cooking pot is returned to cooker when wet, it may damage or cause the product to malfunction.

**Note:** POLARIZED PLUG: If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

**THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY**

**SAVE THESE INSTRUCTIONS**

**Know your 5 Cup Rice Cooker**

**5 CUP**

Capacity cooks up to 10 cups of cooked rice

**Glass Lid**

Allow you view the process of cooking

 
**Cooker and Keep Warm Lights**

'Cooker' light indicates the rice cooker is in the 'Cooker' setting. 'Keep Warm' light indicates the Rice cooker is turned 'On' and has switched automatically to the 'Keep Warm' setting.


**Selector control**

Automatic  
'keep warm' setting


Non-stick coating removable cooking bowl prevents rice from sticking

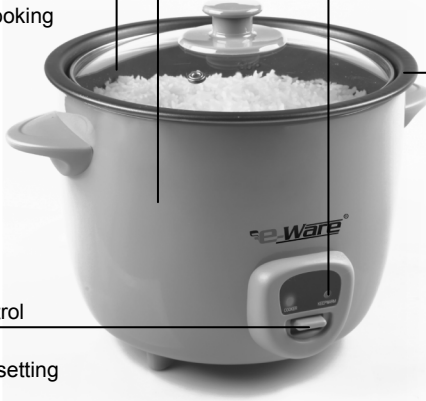

**Accessories:**

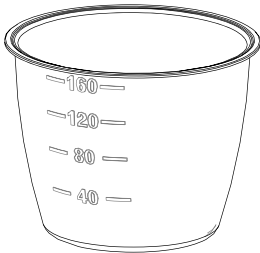 

Measuring Cup

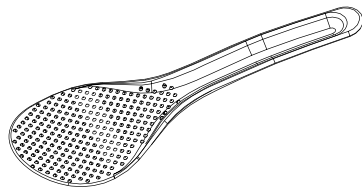 


BPA Free Serving Spoon

**Operating your Rice Cooker**

 Before first use, remove the packaging material and labels and wash the non-stick removable cooking bowl and glass lid in hot soapy water, rinse and dry thoroughly.

## How to cook rice

1. Use the Rice Cooker measuring cup provided to measure the required quantity of rice (refer to cooking tables). Always measure level cups, not heaped (Fig 1.)

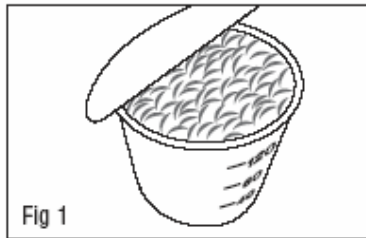

2. Place the rice into a separated bowl and wash with cold water to remove any excess starch. The rice is ready for cooking when water runs clear from the rice.
3. Ensure the exterior of the removable cooking bowl is clean before placing it in the housing (this will ensure proper contact with the inner cooking surface).
4. Add the washed rice to the removable cooking bowl, ensuring rice is spread evenly across the bottom of the bowl and heaped to one side (Fig 2).

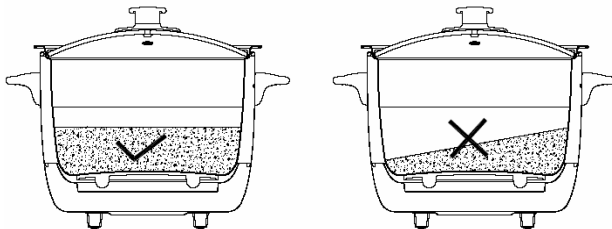 


Figure 2

5. Add water using the following ratios:  
White Rice = 1 cup water: 1 cup rice  
Brown Rice = 1 1/2 cups water: 1 cup rice
6. Place the glass lid into position.
7. Plug into a 120 volt power outlet and then switch the power on at the power outlet. The 'Keep Warm' light will illuminate.
8. To commence cooking, press the Selector Control to 'Cooker'. The 'Cooker' light will illuminate.
9. When cooking is complete, the Rice Cooker will automatically switch to the 'Keep Warm' setting. The 'Keep Warm' light will illuminate.
10. Open the lid and turn the rice over with the serving spoon provided. Replace the lid and allow the rice to stand for 10-15 minutes before serving. This allows any excess moisture to be absorbed, resulting in a fluffier rice texture.

**Note:** Rice can be kept in the automatic 'Keep Warm' setting once you plug the item. To stop 'Keep Warm' setting, switch off at the power outlet and then unplug the cord. Do not remove the glass lid until ready to serve (except for when turning over rice after cooking is complete or as suggested in the recipes).

### Important:

Always place liquid into the removable cooking bowl, or be ready to add oil, butter or margarine, before depressing the Selector Control to the 'Cooker' setting. Never try to force the Selector Control in stay in the 'Cooker' setting after it has automatically switched to the 'Keep Warm' setting. Do not interfere with the automatic Selector Control during operation. To prevent scratching the non-stick surface of the removable cooking bowl, always use wooden or plastic utensils.

## Rice Cooking Tables

The rice measuring cup provided with your 5 Cup Rice Cooker is used in the following tables.

1 Measuring cup is equal to 5.6 oz (160 grams) of uncooked rice.

If your Rice Cooker measuring cup is lost or misplaced, use another cup but maintain the same cooking ratios and ensure you do not exceed 5 cup maximum line in the removable cooking bowl:

White Rice = 1 cup water: 1 cup rice

Brown Rice= 1 1/2 cups water: 1 cup rice.

### White Rice

Uncooked White Rice (5 Rice Cooker cups)	Cold tap water (5 Rice Cooker cups)	Cooked rice (approximate) (5 Cooker cups)	Cooking time (approximate) (minutes)
1	1	2	15-20
2	2	4	20-25
3	3	6	25-30
4	4	8	30-35
5	5	10	30-35

### Brown Rice

Uncooked Brown Rice (5 Rice Cooker cups)	Cold tap water (5 Rice Cooker cups)	Cooked rice (approximate) (5 Rice Cooker cups)	Cooking time (approximate) (minutes)
1	1-1/2	2-1/2	20-25
2	3	5	25-30
3	4-1/2	7-1/2	30-35
4	6	10	35-40
5	7-1/2	N/A	40-45

**Note:** Due to the extra water needed to cook brown rice, the maximum amount of brown rice that may be cooked at one time is 4 cups.

## HOW TO CLEAN

**Always unplug unit and allow to cool completely before cleaning.**

1. Remove the inner cooking bowl. Wash it in warm, soapy water using a sponge or dishcloth.
2. Rinse and dry thoroughly.
3. Repeat process with lid, steam tray and other provided accessories.
4. Wipe the body of the rice cooker clean with a damp cloth.
  - Do not use harsh abrasive cleaners or scouring pads.
  - This appliance is NOT dishwasher safe. Inner cooking bowl and accessories are NOT dishwasher safe.
  - Always make sure the outside of the inner cooking bowl is dry prior to use. If inner cooking bowl is returned to the rice cooker when wet, it may damage this product, causing it to malfunction.

**Model  
XJ-92214/I**

### **TWO YEAR LIMITED WARRANTY**

U.S. PRO APPLIANCES, INC warrants this product to be free from defects in material and workmanship for a period of two (2) year from the date of the original purchase. If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to:

**U.S. PRO APPLIANCES, INC  
14317 E DON JULIAN RD, CITY OF INDUSTRY, CA 91746**

If the appliance is found to be defective in material or workmanship, U.S. PRO APPLIANCES will repair or replace it at free of charge to you. Should U.S. PRO APPLIANCES determine that the product is not defective, is not covered by warranty or is outside of the warranty term, U.S. PRO APPLIANCES shall return the product to you at your expense without being repaired or replaced. The liability of U.S. PRO APPLIANCES is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by U.S. PRO APPLIANCES.

**\*Important: Carefully pack item to avoid damage in shipping. Be sure to include original sales receipt as proof of purchase with product in either original packaging or packaging affording an equal degree of protection along with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**